


J&F CHRONOGRAPH 42mm

TIME & DATE SETTINGS

A) DISPLAYS AND BUTTONS

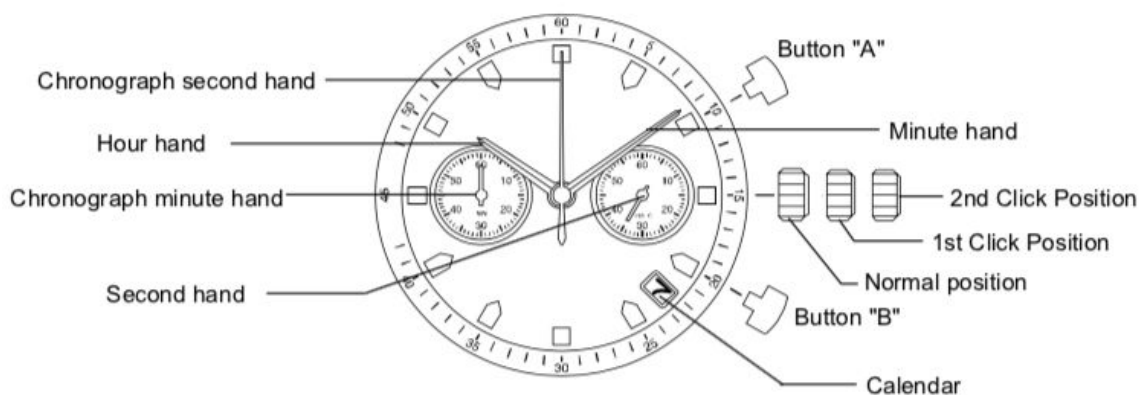

B) SETTING THE TIME

1. Pull the crown out to the 2nd click position
2. Turn the crown clockwise to set hour and minute hands
3. After the time has been set, push the crown back to the normal position

C) SETTING THE DATE

1. Pull the crown out to the 1st Click Position.
2. Turn the crown clockwise to set the date.
3. After the date has been set, push the crown back to the Normal position.

 
Important:

If the date is set between the hours of around 9:00 PM and 1:00 AM, the date may not change on the following day.

D) USING THE CHRONOGRAPH

The J&F Chronograph is able to measure and display time in 1/4 second united up to maximum of 59min 59sec.

1. Press button " A " to start the chronograph.
2. The chronograph can be started and stopped each time button "A" is pressed.
3. Press button "B" to reset the chronograph and chronograph minute and second hands return to their start/zero positions.



E) CHRONOGRAPH RESET (INC. AFTER REPLACING BATTERY)

This procedure should be performed when the chronograph second hand does not return to the Zero position.

1. Pull the crown out to the 2nd Click Position.
2. Press the button "A" once to set the chronograph second hand to the Zero position.
3. Once the hands are set at zero position, reset the time and return the crown to its normal position.

Important:

The chronograph hand can be advanced rapidly by continuously pressing button "A".